



**Nome prodotto: Wake**  
**Cod. HF-18-W**







# RADIOSVEGLIA WIRELESS MULTIFUNZIONE CON UN SUONO DI ALTA QUALITA' E' NEI PIU' SVARIATI SCENARI

Portatile, a casa, in ufficio, TV, macchina, feste, party  
all' aperto e molto altro ancora



1

Amplificatore  
smartphone

2

Radiosveglia



3

Musica in  
macchina





4

Picnic  
all' aperto



5

Cassa per  
tablet ideale  
per lezioni  
online



6

Mentre pratici  
sport







# SUPERFICIE DAL DESIGN CURVO

ampio display, retroilluminazione a LED, che permette una facile lettura dell' orario per chiunque



## DESIGN ARMONICO



Allarme periodico,  
sveglia musicale,  
volume regolabile



Luminosità del display  
regolabile

## DETTAGLIO PULSANTI

### Snooze e regolazione luminosità

#### Regolazione ora

Pressione breve: cambio musica  
Pressione lunga: abbassa il volume



Cambio modalità  
(BT/FM/AUX/TF/USB)

Pressione breve: cambio musica  
Pressione lunga: alza il volume

#### Regolazione sveglia

Pausa/Play/ Rispondi a chiamata  
Pressione lunga connette/  
disconnette il blue-tooth

 




**La radiosveglia è completamente compatibile con Blue-tooth, AUX, FM,USB e lettore di SD card**

**Può essere posizionata ovunque, godita la tua musica**

**Super bassi, stereofonica**

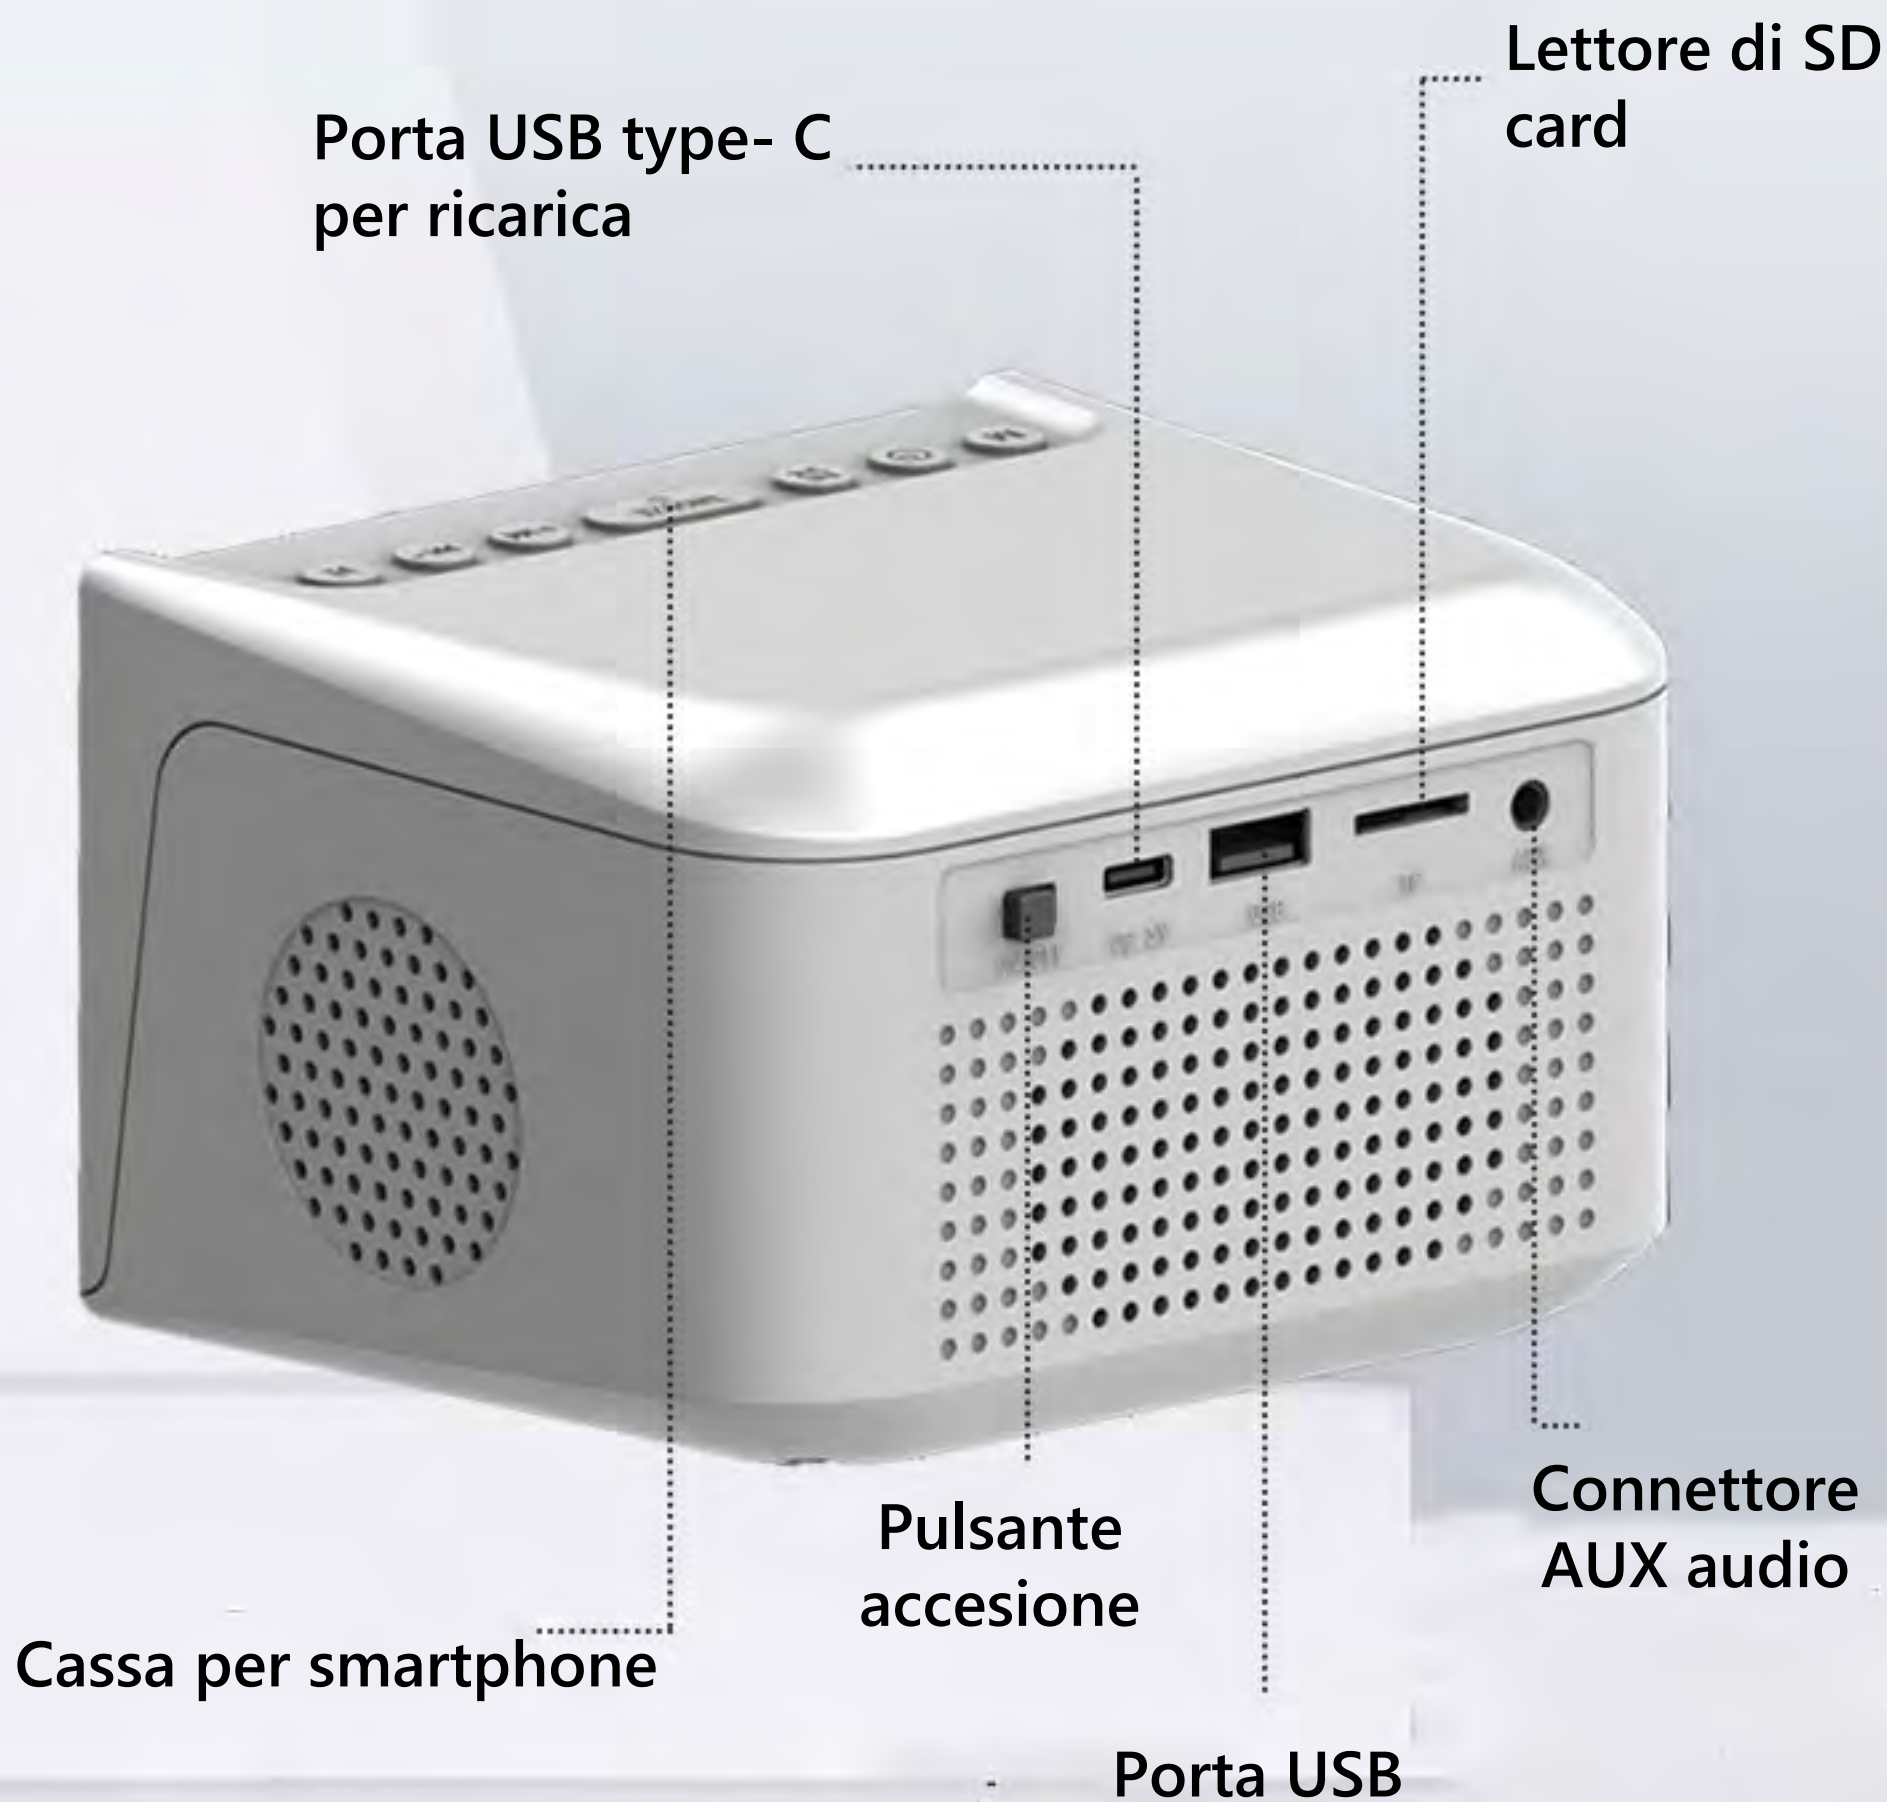



**BASSI AUMENTATI, MINIMA  
DISTORSIONE AD ALTO VOLUME**



**SUONO HIFI:**  
due casse a frequenza piena  
+ diaframma per i bassi



# CARATTERISTICHE TECNICHE

- BT Version: V5.0
- 12/24 ore
- Power: AC/DC alimentatore
- Loudspeaker: 2\*4Ω/5w, 40mm
- Voltaggio di ricarica: DC 5V
- Luminosità display a LED: 4 modalità
- Radio: FM (100HZ - 20KHZ)
- Capacità Batteria: 1200MAH, 3.7V
- Distorsione: 2-10%
- Consumo Energetico: 5W
- Snooze: Illimitato
- Materiale: ABS
- Distanza di trasmissione BT:  $\leq 10m$
- Porta di ricarica: USB TYPE-C
- S/N Ratio:  $\geq 80db$





# Alarm Clock Smart Bluetooth Speaker

 
## Instruction Manual

Before using the product, please read the manual carefully and operate the product according to the instructions. Please keep the manual properly for reference.


### Warm Tips

- \*We always devoted to improve product quality and functions, design is subject to change without notice.
- \*The manual has been carefully checked and strived to be accurate. If there're any errors, the company will not bear the consequences.
- \*The drawing only for reference, please refer to the actual product when purchasing. We reserve all the right for the final explanation of the manual & related detail.
- \*Non professionals are not allowed to dismantle the machine by themselves, so as to avoid unnecessary damage to the machine, and should not be placed in the hot and humid environment.
- \*When the machine is not used for a long time, please charge the machine once a month to ensure that the battery is sufficient and the machine can be used normally when it is needed.

### Function introduction of wireless speaker Hf18

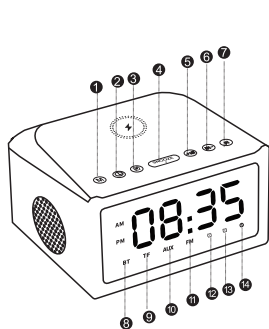

 - 8 Wireless
- 9 TF Card
- 10 Aux line
- 11 FM Radio
- 12 Alarm 1
- 13 Alarm 2
- 14 low battery

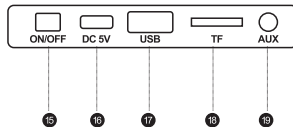

- 1 **M Switch Mode**  
Wireless/FM Radio/TF Card /USB/AUX Line
- 2 **Set time**  
1. Short press: switch to 12/24Hours  
2. Long press: Set time,  
3. Press down again to set hour/minute  
4. In 12-hour mode, show AM/PM
- 3 **Set Alarm**  
1. Short Press: Switch Alarm 1/Alarm 2  
2. Long Press: Set the Alarm time  
3. When in Alarm mode,  
Short Press: set clock/min turn off alarm/select Ring/volume/snooze duration
- 4 **Snooze/Brightness Adjustment**  
1. Short press: adjust display brightness-4 levels/snooze
- 5 **Turn up the volume /Switch song**
- 6 **Turn down the volume /Switch song**
- 7 **Short press II**  
1. Pause/play/answer the call.  
2. Long press: disconnect/connect BT
- 15 Turn ON/OFF
- 16 Charging port: Type-c
- 17 USB
- 18 TF Card
- 19 Aux line

### Instructions for using

Mobile Phone connection method

- 1). Turn on the ON/OFF button in the back, then enter the wireless mode
- 2). Turn on BT on phone, search/select HF18 to connect and pair

AUX Line(Access to audio line)

(some models don't have this function,please refer to the actual model)

Use a 3.5mm audio cable to connect the mobile phones, DVR drives, MP3/4 Players or other equipment.

Playing with SD card

- 1) Insert the Tf card into the speaker to play music
2. Support SBC/MPS/WMA format, maximum 32G capacity

FM Radio

Please connect the audio cable to the speaker first

- 1) Short press Button M to switch to FM mode, Long press button **II** : search station automatically, save the station automatically

### Time setting

Long press button **II** , Switch 12/12Hours Mode, It will display "AM" or "PM" if you choose 12Hours mode. AM/PM won't be displayed if it's 24 Hours mode.

1. In any mode, long press button **II** to enter the clock setting, the <Clock>number will start flashing, press button **II** to adjust the time of<Clock>

2. Short press the button **II** again, the<minute>number on the display starts flashing, press button **II** to adjust the time of <Minute>

3. Then a long press button **II** to finish setting, or wait 8 seconds to save settings automatically.

### Setting Alarm Clock

In Alarm Mode: Press button **II** to choose Alarm 1/Alarm 2. When choosing Alarm 1 **II** , Long press button **II** , then please set the alarm as follows:

1. The clock number flashing, press button **II** to set the clock
2. Short press button **II** , <minute>starts flashing, press button **II** to set the minute

### Setting Alarm Clock

3. Short press button **II** , "OFF/ON" start flashing, press button **II** to switch the turn on/off the alarm
4. Short press button **II** , number 01/02/03 start flashing, press button **II** to select music ringtone,
5. Short press button **II** , setting alarm volume 0-30
6. Short press button **II** , setting sleep duration, 60/120/180Secs, press button **II** to choose from.
7. Long press button **II** , save setting.

**The setting method of Alarm2 is the same as Alarm 1( Note: Short press button **II** to set Alarm clock 1, short press button **II** to set Alarm 2)**

### Tips

1. Button **II** is the key to switching the alarm clock function. Short press: setting clock/minutes/turn on or off the alarm/choose ringtone /ring volume/snooze duration
2. Short press any button to end the alarm when the alarm clock rings, and the next cycle will ring again.
3. Short button **SNOOZE** when it rings, the alarm clock icon will flash continuously to indicate snoozing,
4. When the alarm light is on, it means the alarm clock is working, and when the alarm light is off, it means the alarm is turned off.

### Troubleshootina

Problem points	Causes and Solutions
Bluetooth pairing failed	Reboot pairing There are too many Bluetooth devices around which makes it difficult to search. Turn off other Bluetooth devices and search again
Low or distorted sound	Low battery Adjust the volume to a suitable level
Interruption of Bluetooth music	Whether it exceeds the effective connection distance of the speaker (10 meters effective distance) There are obstacles to the sound of speakers   and mobile phones

Note: If the above method fails to eliminate the fault, please contact the dealer, do not disassemble and repair the machine by yourself, otherwise the warranty will not be provided

### Charging instructions

\* Please use standard or equivalent power adapter.

\* When the power of the product is low or insufficient, the speaker will emit a low-battery tone and then turn off automatically. At this time, charge the speaker as soon as possible. Charging until the indicator light is off, means the battery is fully charged.

\* When not in use for a long time, it is recommended to charge the machine once a month.