



Product name: Wake
Cod. HF-18-W





MULTIFUNCTION WIRELESS SPEAKERS WITH SUPERIOR SOUND ARE SUITABLE FOR VARIOUS SCENARIOS

Mobile&portable, home, office, TV, car, party, gathering, online teaching and other scenarios



1

Home
Entertainment



2

Bedroom
alarm clock



3

Car Music

4

An outdoor picnic



5

Online learning and teaching

Time management is more accurate, hear more clearly and more effective



6

Indoor Exercise/Yoga

Keep the joy of your body mentally in a hurry time, calm down and enjoy music and do yoga.





UNIQUE CURVED SURFACE DESIGN

plus size HD display, bright LED backlight, which can be clearly seen everywhere and more convenient for elderly and children to use it



Humanized and Thoughtful Design



Set alarms by time period, optional music alarm, the volume is adjustable.



The large LED display offers four brightness settings (L-3, L-2, L-1-AU-)

BUTTON DETAILS

Setup Time

Short press to switch 12/24 hours,
long press to set current time;
short press again to set
hour/minute respectively

Snooze function/adjust the brightness

5 kinds of snooze times to choose from,
30secs/ 60secs/ 120secs/ 180 secs/ turn off.
4 levels of brightness are available.

Short press: switch music
Long press: volume down



Mode Switch

BT/FM/AUX/TF/USB

Short press: switch music
Long Press: volume up

Setup the Alarm

short press to switch Alarm 1/Alarm 2
Long press to set the alarm time.

Pause/Play/Answer a call

long press: connect/disconnect
Blue-tooth



The Altoparlante is fully compatible with Blue-tooth, AUX, FM, USB and TF playback

Meet your daily needs, can be placed in the bedroom, living room, office, enjoy music

Super bass, Stereophonic

TF card playback

It is also very convenient for kids, teens and the elderly

Type-C charging port

Hands-free Call for Phone:

Anti-noise High Sound Quality


Independent on/off key

USB input reading

enjoy music without your phone

AUX audio cable connection

play as computer accessories. Connect to TV/computer, play in seconds, share quickly.

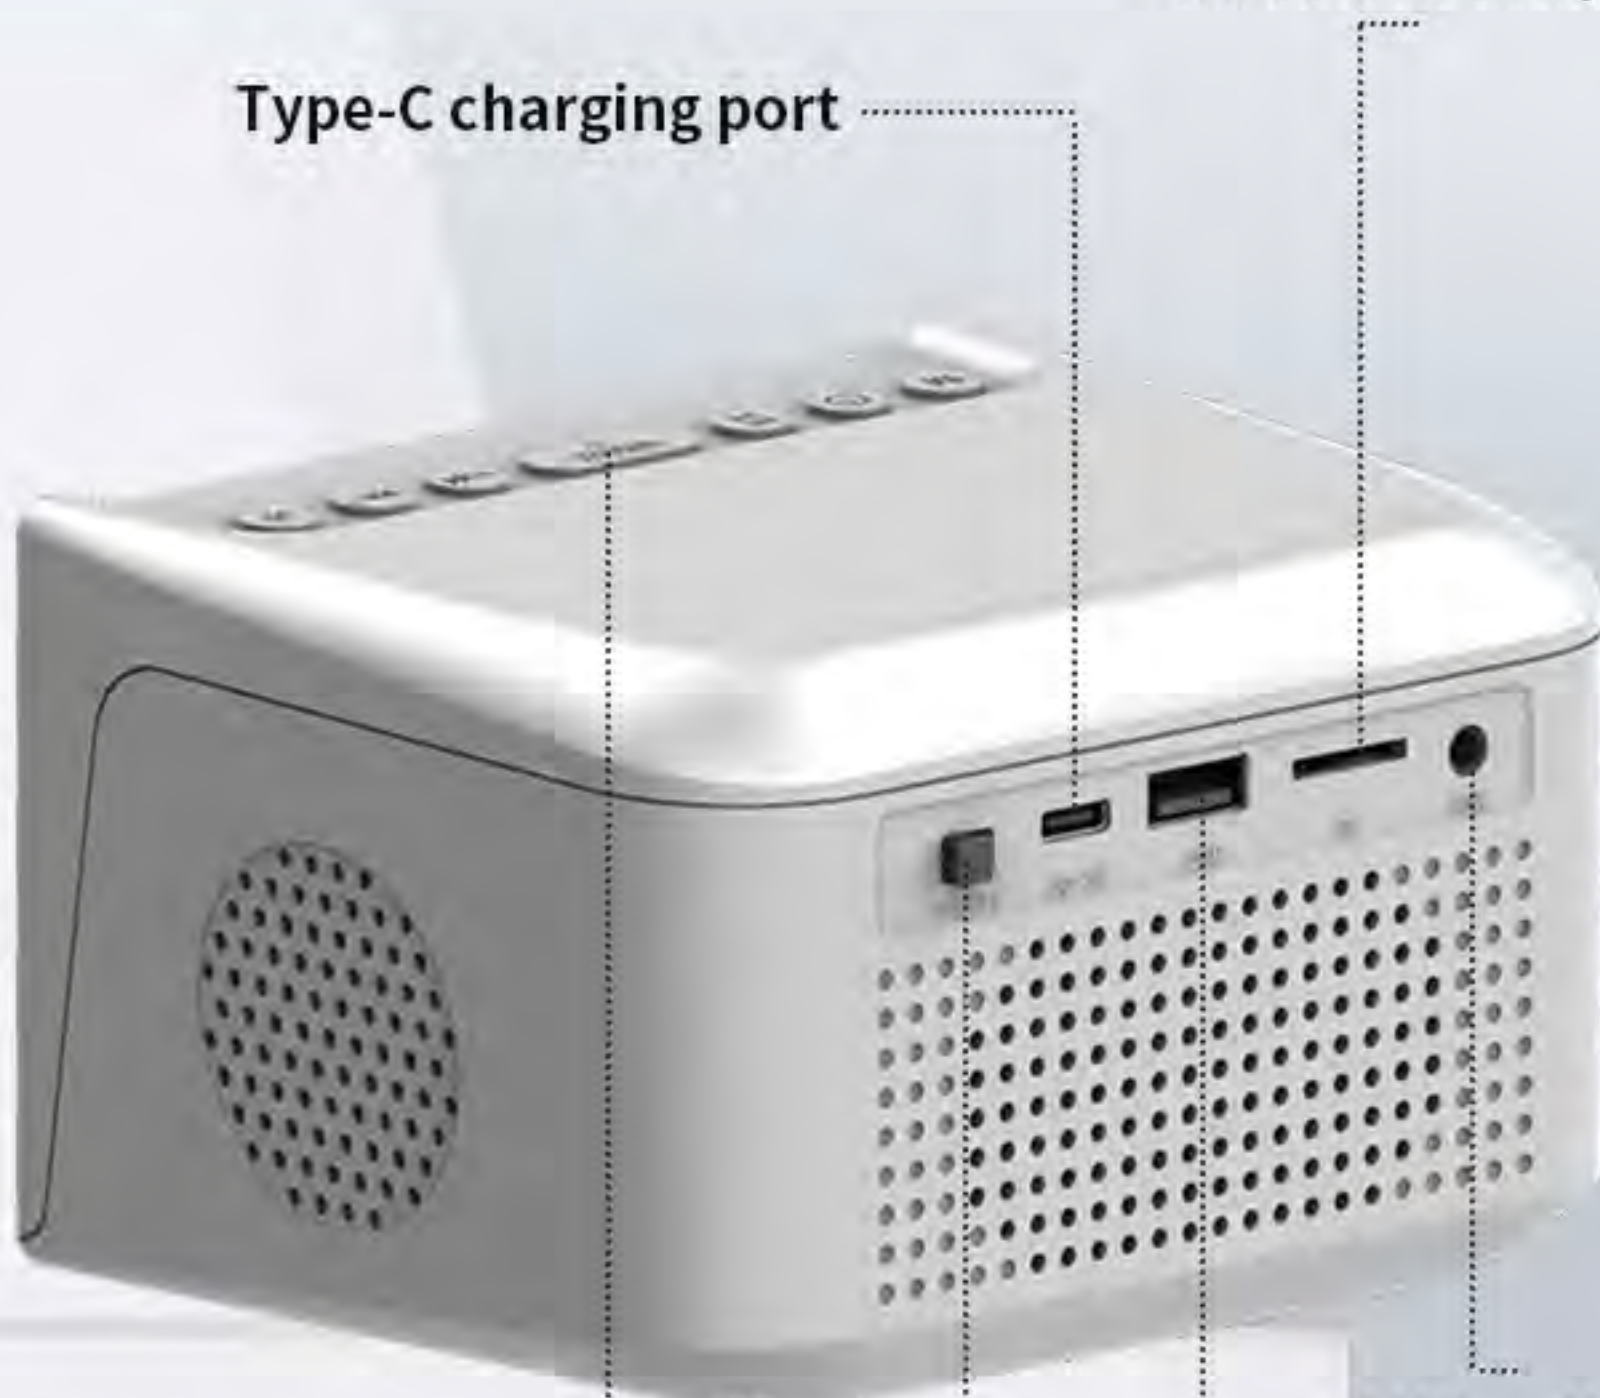

SURGING EXTRA BASSLOW NOISEILOUD VOLUME

Independent Cavity Design, Built-in Backflow Gas Resonates.

The treble is loud and powerful, the mediant is clear and pleasant,
The bass is deep and resonant, and the 360° stereo surround sound



HIFI Sound:

Built-in full-frequency
dual loudspeakers + bass
diaphragm

Parameters

Product information



BT Version: V5.0

Battery Capacity: 1200MAH, 3.7V

Time Mode: 12/24 hours

Degree of Distortion: 2-10%

Power Source: AC/DC Adapter

Power Consumption: 5W

Loudspeaker: 2*4Ω/5w, 40mm

Snooze: Unlimited

Charging Voltage: DC 5V

Material: ABS

LED Display brightness: 4 modes

Charging Port: TYPE-C

Radio: FM Radio(100HZ- 20KHZ)

S/N Ratio: $\geq 80\text{db}$

Blue-tooth transmission distance: $\leq 10\text{m}$



Alarm Clock Smart Bluetooth Speaker


Instruction Manual

Before using the product, please read the manual carefully and operate the product according to the instructions. Please keep the manual properly for reference.


Warm Tips

- *We always devoted to improve product quality and functions, design is subject to change without notice.
- *The manual has been carefully checked and strived to be accurate. If there're any errors, the company will not bear the consequences.
- *The drawing only for reference, please refer to the actual product when purchasing. We reserve all the right for the final explanation of the manual & related detail.
- *Non professionals are not allowed to dismantle the machine by themselves, so as to avoid unnecessary damage to the machine, and should not be placed in the hot and humid environment.
- *When the machine is not used for a long time, please charge the machine once a month to ensure that the battery is sufficient and the machine can be used normally when it is needed.

Function introduction of wireless speaker Hf18

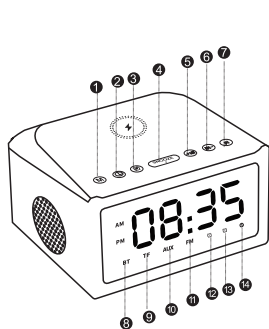

- 8 Wireless
- 9 TF Card
- 10 Aux line
- 11 FM Radio
- 12 Alarm 1
- 13 Alarm 2
- 14 low battery

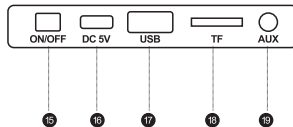

- 1 **Switch Mode**
Wireless/FM Radio/TF Card /USB/AUX Line
- 2 **Set time**
1. Short press: switch to 12/24Hours
2. Long press: Set time,
3. Press down again to set hour/minute
4. In 12-hour mode, show AM/PM
- 3 **Set Alarm**
1. Short Press: Switch Alarm 1/Alarm 2
2. Long Press: Set the Alarm time
3. When in Alarm mode,
Short Press: set clock/min turn off alarm/select Ring/volume/snooze duration
- 4 **Snooze/Brightness Adjustment**
1. Short press: adjust display brightness-4 levels/snooze
- 5 Turn up the volume /Switch song
- 6 Turn down the volume /Switch song
- 7 **Short press II**
1. Pause/play/answer the call.
2. Long press: disconnect/connect BT
- 15 Turn ON/OFF
- 16 Charging port: Type-c
- 17 USB
- 18 TF Card
- 19 Aux line

Instructions for using

Mobile Phone connection method

- 1). Turn on the ON/OFF button in the back, then enter the wireless mode
- 2). Turn on BT on phone, search/select HF18 to connect and pair

AUX Line(Access to audio line)

(some models don't have this function, please refer to the actual model)

Use a 3.5mm audio cable to connect the mobile phones, DVR drives, MP3/4 Players or other equipment.

Playing with SD card

- 1) Insert the Tf card into the speaker to play music
2. Support SBC/MPS/WMA format, maximum 32G capacity

FM Radio

Please connect the audio cable to the speaker first

- 1) Short press Button M to switch to FM mode, Long press button II : search station automatically, save the station automatically

Time setting

Long press button , Switch 12/12Hours Mode, It will display "AM" or "PM" if you choose 12Hours mode. AM/PM won't be displayed if it's 24 Hours mode.

1. In any mode, long press button to enter the clock setting, the <Clock>number will start flashing, press button to adjust the time of <Clock>

2. Short press the button again, the <minute>number on the display starts flashing, press button to adjust the time of <Minute>

3. Then a long press button to finish setting, or wait 8 seconds to save settings automatically.

Setting Alarm Clock

In Alarm Mode: Press button to choose Alarm 1/Alarm 2. When choosing Alarm 1 , Long press button , then please set the alarm as follows:

1. The clock number flashing, press button to set the clock
2. Short press button , <minute>starts flashing, press button to set the minute

Setting Alarm Clock

3. Short press button , "OFF/ON" start flashing, press button to switch the turn on/off the alarm
4. Short press button , number 01/02/03 start flashing, press button to select music ringtone,
5. Short press button , setting alarm volume 0-30
6. Short press button , setting sleep duration, 60/120/180Secs, press button to choose from.
7. Long press button , save setting.

The setting method of Alarm2 is the same as Alarm 1(Note: Short press button to set Alarm clock 1, short press button to set Alarm 2)

Tips

1. Button is the key to switching the alarm clock function. Short press: setting clock/minutes/turn on or off the alarm/choose ringtone /ring volume/snooze duration
2. Short press any button to end the alarm when the alarm clock rings, and the next cycle will ring again.
3. Short button when it rings, the alarm clock icon will flash continuously to indicate snoozing,
4. When the alarm light is on, it means the alarm clock is working, and when the alarm light is off, it means the alarm is turned off.

Troubleshootina

Problem points	Causes and Solutions
Bluetooth pairing failed	Reboot pairing There are too many Bluetooth devices around which makes it difficult to search. Turn off other Bluetooth devices and search again
Low or distorted sound	Low battery Adjust the volume to a suitable level
Interruption of Bluetooth music	Whether it exceeds the effective connection distance of the speaker (10 meters effective distance) There are obstacles to the sound of speakers and mobile phones

Note: If the above method fails to eliminate the fault, please contact the dealer, do not disassemble and repair the machine by yourself, otherwise the warranty will not be provided

Charging instructions

* Please use standard or equivalent power adapter.

* When the power of the product is low or insufficient, the speaker will emit a low-battery tone and then turn off automatically. At this time, charge the speaker as soon as possible. Charging until the indicator light is off, means the battery is fully charged.

* When not in use for a long time, it is recommended to charge the machine once a month.