

TechVision Infiniti – User Manual

TV Set Up


Quick Start Guide

The TV will display 'no signal' until it has been tuned in.

Turn TV on by pressing power.


Then, using 'select' choose the TV channel. A 'DVB-T' screen saver should be displayed.

If it isn't, turn the TV on and off at the mains.

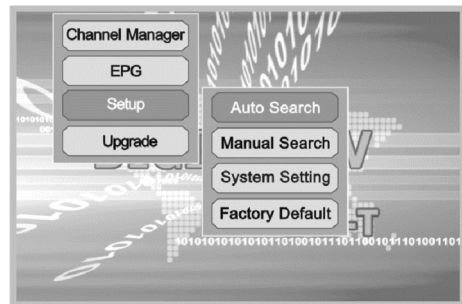


Press 'menu' to bring up the DVB-T menu screen, as shown here.

 Using ▼ move to select and press 'OK'. Press OK again to select Auto Scan. Check settings are correct, as shown opposite, then navigate down to 'Search' and press 'OK'.

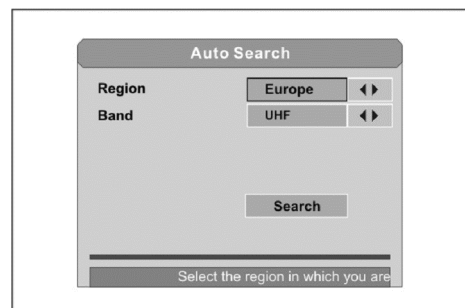

All available programs will be displayed on TV/radio window.

Press OK to save or exit to quit.

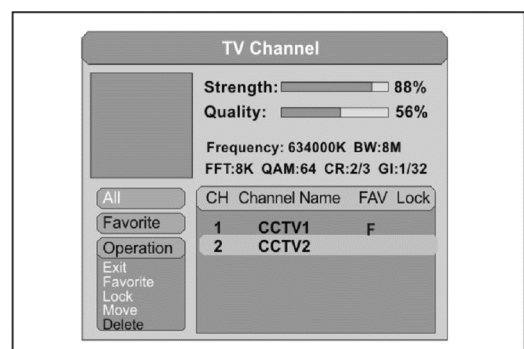

* Tip – to display Radio Channels press TV/Radio

Remote Control

Please note the remote is a 2-part remote. All functions in the top half control the TV functions. The bottom half of the remote controls the DVB-T tuner.

MENU

Used to access menu options for picture quality adjustment, channel scan, and return to original factory setting

When press menu button, it will be menu navigation down button

When press menu button, it will be menu navigation up button

Number Keys(0~9)

For direct entry of channel number or input of alphanumeric characters
System Information

POWER

LCD monitor power button (On/Off)



Mute setting

SELECT

Switching Video source

VOLUME+-

Change the degree of volume

CHANNEL▲▼

Change channels sequentially up or own in viewing mode



MENU

Access the DVB-T main menu

OK

Select an item or confirms a choice. List will enter the channel manager

Under DVB-T mode, move the left or right item in the menu

EPG(Electronic Program Guide)

Call up the EPG function Switching TV and AV

FAV

Select the favorite or all DVB-T channels

INFO

Displays information on viewed channel (DVB-T mode)

TV/TXT

DOES NOT FUNCTION as this TV does Not have Teletext.

EXIT

To return to previous status or exit

RECALL

Goes back to the previously viewed channel

SCAN

Scan TV channel.



Under DVB-T mode, change channels sequentially up or down in viewing mode

PgUP

 
Move up a page in the channel list of DVB-T

PgDn


Move down a page in the channel list of DVB-T

TV/RADIO

Switches between TV and AV mode

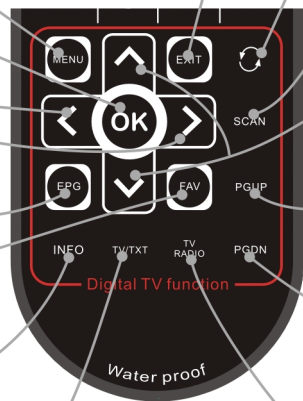

Replace battery

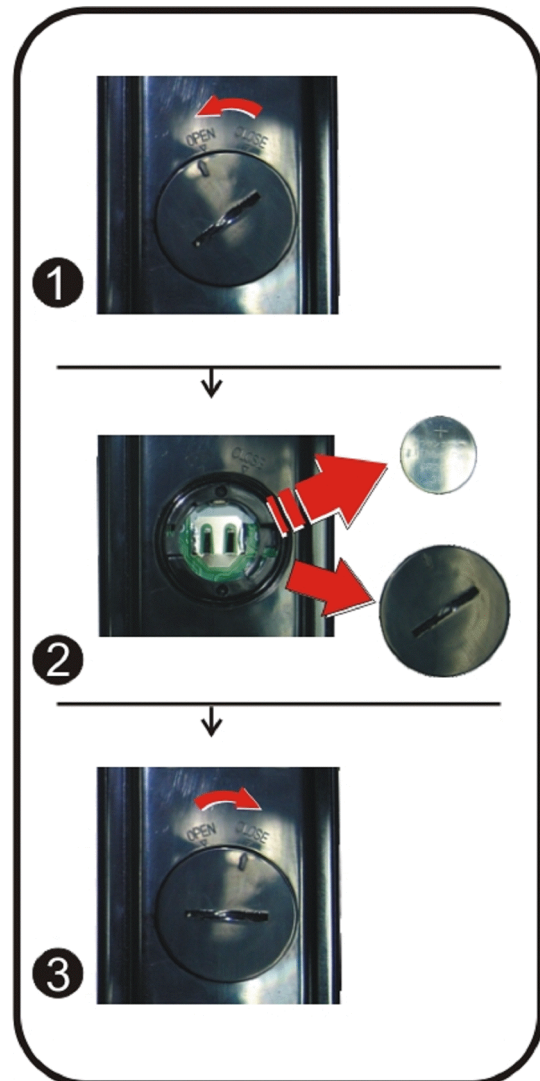 

1. Open the battery cap

Turn around the battery cap to the open mark, and take the battery out from the base (See figure 1)

2. Replace battery

Ensure the anode (Positive) and cathode (Negative) are correct.

Note: Do not lose the waterproof rubber seal

3. Close the battery cap

Turn around the battery cap to the close mark (See figure 3)


Specification of remote control	
Power	DC 3.3V
Control distance	In 5 Meter when facing the monitor and the angle is under 20 degree
Temperature	Operation 0~50℃
Dimension	150(L) ×60 (W)×11□H□
Weight	45g ±5g

Adjust settings

OSD MENU LIST – Remote Control (Button)


BRIGHTNESS

 Adjust the brightness of Screen.
Adjustment range $\square 0 \sim 15$

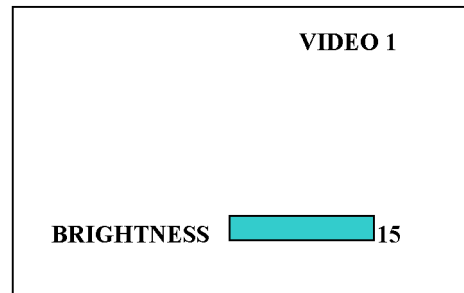


CONTRAST

 Adjust the Contrast of Screen
Adjustment range $\square 0 \sim 31$

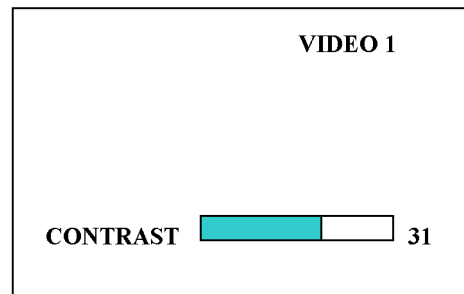


SATURATION

 Adjust the saturation of picture
Adjustment range $\square 0 \sim 31$

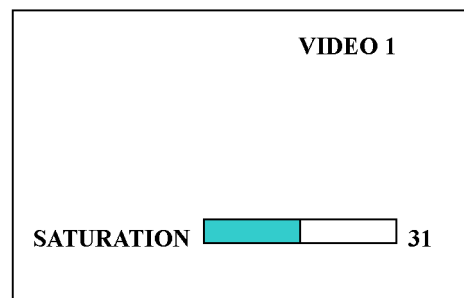


MUTE

 Adjust the video output to
Mute function.

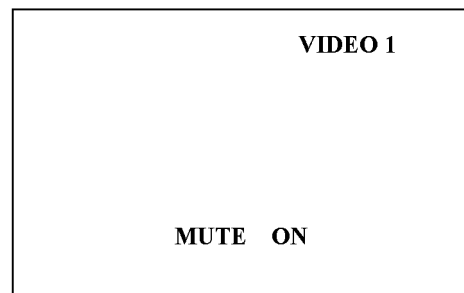


VOLUME

 Adjust the volume on screen display.
Adjustment area $\square 0 \sim 31$

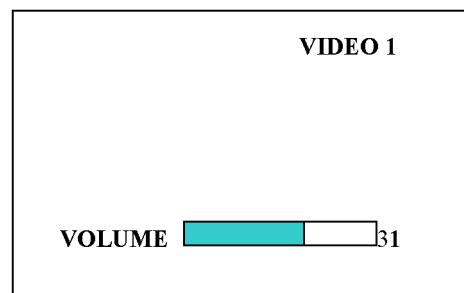


DEFAULT

 Return to the original setting of Manufactory by pressing the up key or down key

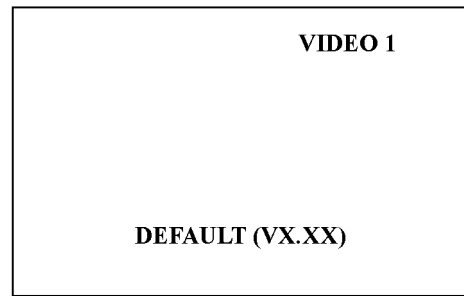

SAVE AND EXIT

 Press the up key or down key to Save your personal setting and exit to menu mode.

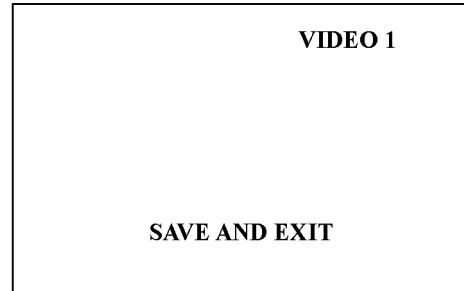


Digital Tuner Function

DVB-T MENU LIST – Remote Control (Button MENU)

Channel Manager


Channel manager

 Choose "channel manager" and select "TV Channel" or "Radio Channel".

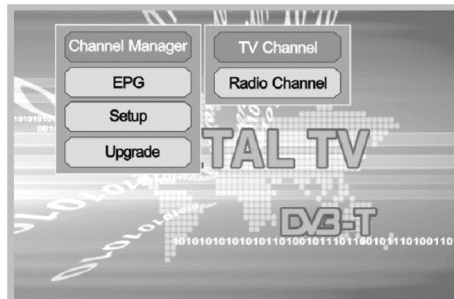


TV Channel

 Select "ALL" to see all available channels.

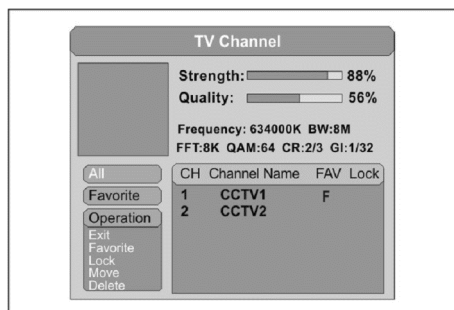


Favorite TV Channel

 Select "Favorite" to show favorite channel in the window.

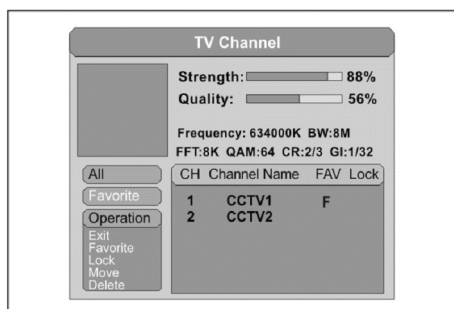


Favorite

 Select "ALL" to get all channels, then move to "Favorite" in the operation list and press OK. Use up/down to select the channel. Press OK, the "F" will appear and the channel is selected as a favorite channel. Press OK again to "Cancel" or press "EXIT" to save it.

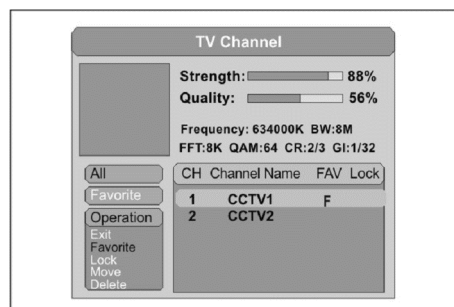


Move

 Select "Move" option and press "OK", select channel and press "OK" to move. Press "▲▼" button to move it to the position where you want. Press "EXIT" to save it.

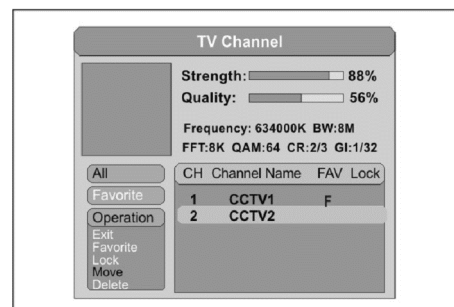


Delete

 Select "Delete", to go channel list and press "▼▲" button to choose channel press OK to delete.

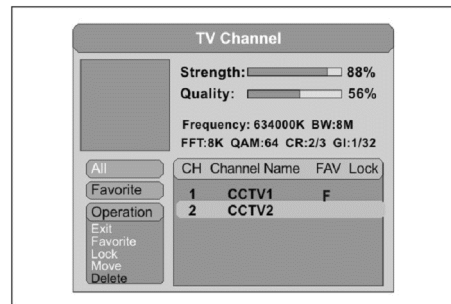

Radio Channel

 All set up and operation is the same as in TV Channel.

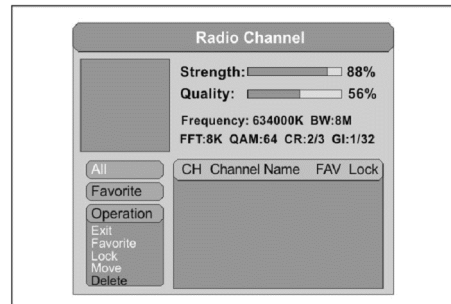


EPG

EPG

*Select "Program list" and press "OK" to enter sub menu.

 *Press "EPG" key on remote to select advanced or simple EPG.

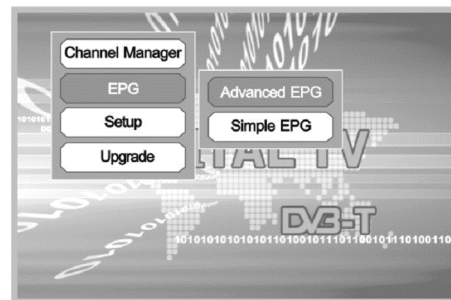

Advanced EPG

Press "▲▼" button to check one week of new schedule on TV channels.



Simple EPG

Press "▲▼" button to check current and next broadcasting program and timing.



General Precautions

1. Do not add any parts or use any accessories not provided from the manufacturer.
2. Temperature. (Storage 0~70, Operating 0~65) degrees C.
3. Make sure Anode (Positive) and Cathode (Negative) are correctly connected. It might damage your LCD if connecting wrong electrode.
4. Please replace new battery immediately when the battery runs out. The life of battery is one year.
5. The TV is waterproof IP67. This is fully waterproof, however, we would not suggest submerging in water.
6. Whilst the remote control is waterproof, we would not suggest floating it in water. It is recommended to dry the remote after use.
7. Clean the unit with a soft damp cloth. Do not use abrasive substances or materials that could scratch the glass panel

www.techvision.co.uk