

Trouble Shooting

Check that all cables are securely fastened, that you have connected to an aerial feed or chosen AV source and that the unit is switched on.

General Problem	Suggestion & Improvement
No Signal	When first switched on this warning will display. Only when you have tuned the TV in will the TV work.
TV switches off	The TV will automatically switch off if there is no source connected and it receives no instructions from the operator. eg; If watching a video, press play on the video shortly after turning on the TV or it will switch off.
I cannot tune into all channels	This is not a fault of the TV. For all reception problems a qualified aerial installer should be consulted.
No Video Display	Ensure that the video signal cable is correctly connected to monitor and source.
	The system supports three input signals. Check the Monitor display is in the right input signal. ie Yellow to Yellow.
	Check input sources (e.g. VCR, etc.) function normally.
No Audio Output	<ol style="list-style-type: none"> 1. Ensure that the video signal cable is correctly connected to Monitor and source. 2. Check the audio signal is connected with "Audio in" switch correctly. 3. Check audio control is MUTE OFF. 4. Check speaker wire goes to correct terminals.
Right-Left-Audio-Output Error	Check if the audio signal cable is correctly connected to the Right-audio-In and Left-audio-In.