

# Pro-Excel Ionic

Professional hand-held  
hairdryer with anti-theft  
wall holder "Vane" (optional)



**ANTI-THEFT**  
Wall holder "Vane"  
with cable lock

## Technical Features

Feeding tension: 220/240 Volts  
Frequency: 50/60 Hertz  
Power: **1800 Watts**

### Ionic function

Professional AC induction motor  
with high performance fan

Professional switch double selection:

**two air speeds and three temperature settings**

Main ON/OFF switch

**Secondary safety push button** (Push & Release)

**Removable back side cap** for easy clearing

**Safety thermostat** placed on the heating element  
to avoid overheating

Accessory: small diffuser/concentrator in black matt color

Air volume at maximum speed: 70m<sup>3</sup>/h

Maximum air speed: 11m/s

Noise at the maximum power air speed: 70dB

Air temperature at the maximum power speed: 75°C

Plastic material: Polyamide PA 6.6 nylon semi-crystalline  
polymer at high abrasion/strokes resistance


Metallic shape plastic material V-Zero degree flame retardant

**Spiral electrical cable** with maximum extension 2,5 meters  
and with two-pole European Schuko plug

### OPTIONAL:

Wall holder "Vane" with anti-theft cable lock:  
minimal wall holder made of matt black steel

### CE certification

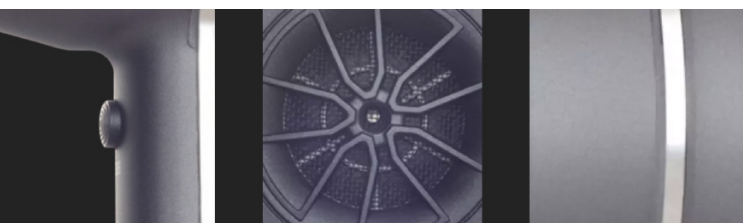

**SECONDARY SAFETY**  
ON/OFF switch  
and Push&Release button

**LONG-LIFE MOTOR**  
Silence and  
high performance

**NYLON PA 6.6**  
High abrasion/strokes resistance  
and flame retardant material

**WWW.HOSPISTYLE.IT — WWW.GHIBLIEVO.COM**

HOSPISTYLE  
P.O. Box n° 42 Ponte Nossa  
24028 PONTE NOSSA  
(BG) ITALY

info@hospistyle.it  
info@ghibliervo.com

Tel.  
(+39) 338 4733486