

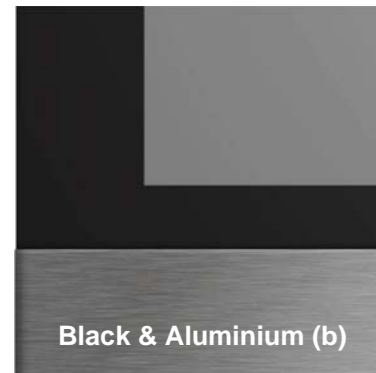


Available finishes

Standard Finishes & Strips (available with 7" & 17" models):

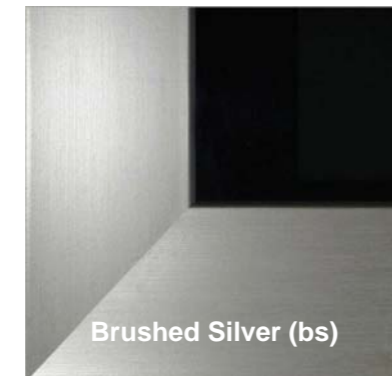


Full Frame Options (available with 17" model only):

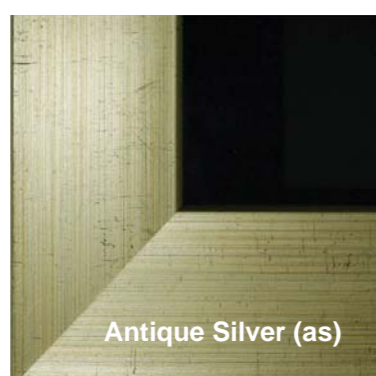

Installation is as easy as 1,2,3...

1) Recess method:

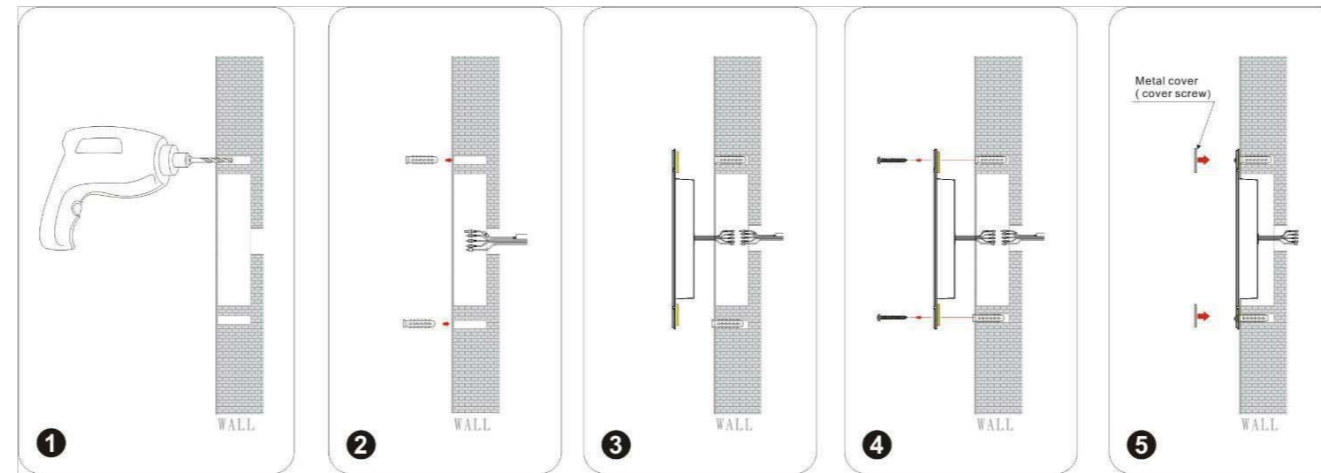

Step 1 - Cut out a recess and drill pilot holes for fixing screws.

Step 2 - Plug holes and feed wires to the recess.

Step 3 - Connect up the leads from the back of the unit.

Step 4 - Apply a thin bead of sealant to the back of the unit and screw the unit into place.

Step 5 - Fix the decorative finishing strips (screw hole covers) into position.

2) VESA mounting method:



Both our 7" & 17" Infiniti TVs have VESA fixings on the back, which means that they don't have to be recessed into a wall (being complete sealed units), but can simply be mounted using a standard VESA bracket.

Available from:


Infiniti Range

Luxury Waterproof LCD TVs

For fabulous Bathrooms...



and divine Kitchens

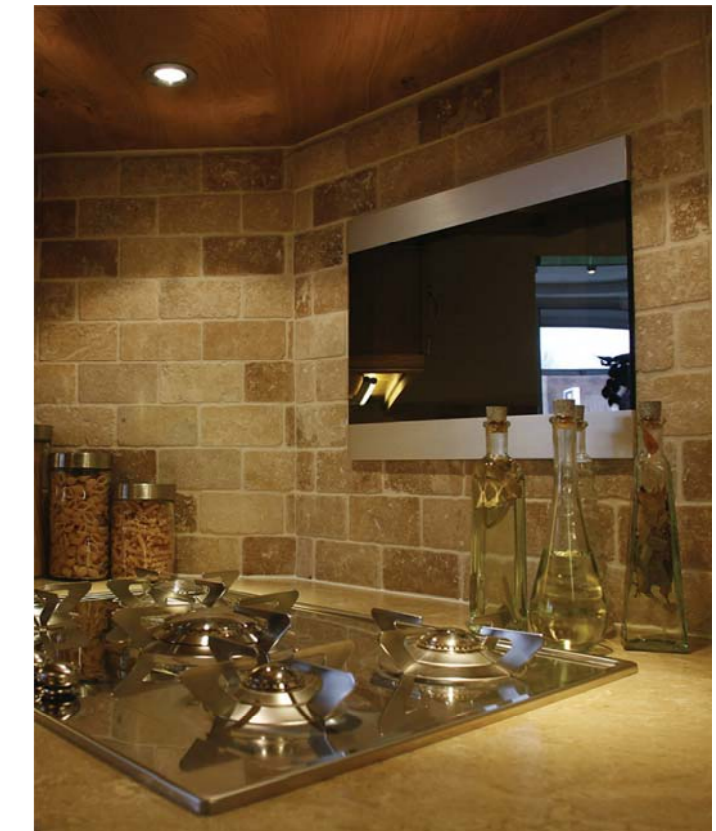

Our Infiniti TV is gorgeous in appearance, with Freeview built-in, a heated glass screen (to stop misting) and being 'completely' waterproof, it's intelligent too!



www.techvision.co.uk

17" Infiniti Mirrored – Antique Silver (TVIF1700mas)



Key features

- ✓ High bright/high resolution, wide screen LCD panel
- ✓ Integrated Freeview and digital radio
- ✓ Heated, toughened glass screen (to stop misting)
- ✓ Waterproof rated IP67 (ideal for wet and steamy areas, indoors or outdoors)
- ✓ Connects to separate stereo speakers
- ✓ Comes with a waterproof remote control
- ✓ Can connect to DVD player, SKY or CABLE
- ✓ Two simple installation methods (recess or wall-mount)
- ✓ Available as 7" or 17" wide screen
- ✓ Choice of finishes

7" Infiniti TV (TVIF700)

They say good things come in small packages and that is certainly true for our 7" unit.

Being unobtrusive yet stylish, this model is ideal for smaller bathrooms, en-suites and shower rooms.

With a 7" widescreen display and high bright panel, it provides an inexpensive alternative for bath time viewing.

This size also provides the perfect solution for a breakfast bar TV!



17" Infiniti TV (TVIF1700)

If it's hotel style luxury you're looking for, then our 17" widescreen is the one for you.

Used in hotels and bathrooms world-wide this unit will give any room the ultimate finishing touch. With a choice of mirror finish or clear glass and several frames to choose from, there's a design to suit your needs.

As the Infiniti TV is a complete sealed unit, installation is simple and relatively quick. No penetration of water, steam or dust also makes this screen a fabulous, kitchen splash back!



Kitchen images - courtesy of Ideal Kitchen Company, Huddersfield.

Technical Specification:

- Panel: 7" TFT LCD (16:9)
- Waterproof Rating: IP67
- Operating Temp: 0 - +50 (degrees C)
- Storage Temp: -20 - +60 (degrees C)
- Brightness: 350cd/m2
- Contrast: 500:1
- View Angle: H:170 V:160
- Max. Resolution: 1440 x 234
- Power Input: 10V-40V DC
- Signal Input: TV/AV, 75Ω composite video
- System: DVBT or PAL
- TV Dimensions: 228w x 160h x 54d mm
- Net Weight: 1.5Kgs



Technical Specification:

- Panel: 17" TFT LCD (16:9)
- Waterproof Rating: IP67
- Operating Temp: 0 - +50 (degrees C)
- Storage Temp: -20 - +60 (degrees C)
- Brightness: 500cd/m2
- Contrast: 800:1
- View Angle: H:170 V:160
- Max. Resolution: 1440 x 900
- Power Input: 10V-40V DC
- Signal Input: TV/AV, 75Ω composite video
- System: DVBT and PAL
- TV Dimensions: 475w x 397h x 44d mm
- Net Weight: 5.25Kgs

